


MEASURING GUIDELINES

Accurate measurements are essential, for both correct pricing and proper fit. Use only a hard-edged ruler or steel tape, never a cloth tape. For inside mounts, width measurements should be rounded down to the nearest 1/8" to prevent shade from binding against the window casing.

INSIDE MOUNTING (IB)

- For **Width (A)**, measure across the window casing from one inside edge to the other in three places, top, middle, and bottom. Record the smallest width rounded down to the nearest 1/8".
- For **Length (B)**, measure the inside area from the top inside edge down to the top of the sill in three places, left, middle and right. Record the longest length rounded up to the nearest 1/8".
- The factory will make all the necessary deductions for inside mount.

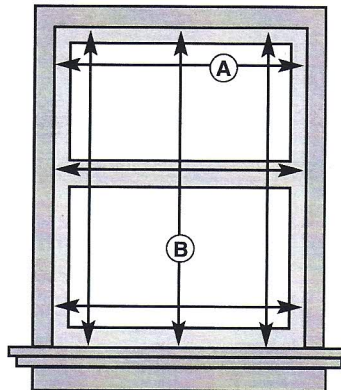

OUTSIDE MOUNTING (OB)

- For **Width (A)**, measure from one edge of the casing to the other. Record the measurement rounded up to the nearest 1/8".
- For **Length (B)**, measure from the top of the window sill up to the desired top of the shade. Again, record the measurements rounded up to the nearest 1/8".
- Outside mounted shades are fabricated to order dimensions.

